




Ford Ranger / Mazda BT50 MY17+ Front Sway Bar Relocation Kit

PART NUMBER: 1203K

It will be necessary to remove the front under body plate in order to install this kit.



1. Remove the 2 bolts and 2 nuts that secure the sway bar mounts to the front of the chassis crossmember.
2. Install the relocation plates to the original position of the sway bar mounts and reinstall the factory bolts and nuts.

NOTE: THE TALLER SIDE OF THE PLATE SHOULD BE TOWARD THE CENTRE OF THE VEHICLE.
Refer Fig 1.

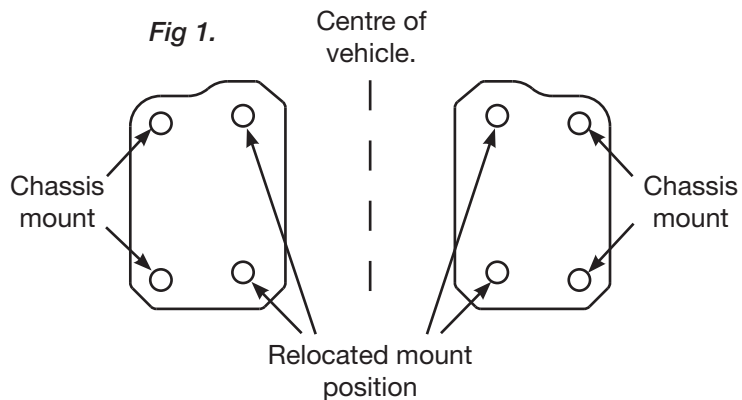

3. Reposition sway bar mounting rubbers and brackets in alignment with remaining holes in the plates.
4. Re-install mounts using the new hardware provided.
Refer Fig 2.
5. Tension all fasteners to 145Nm.

Fig 2.

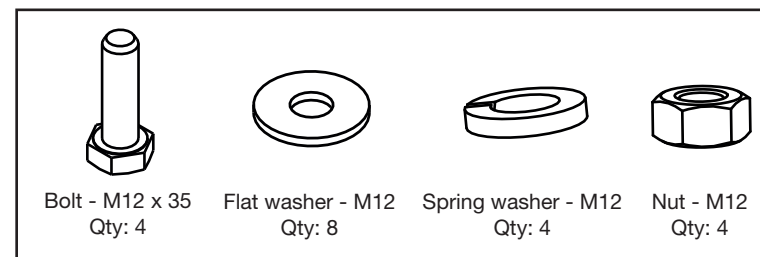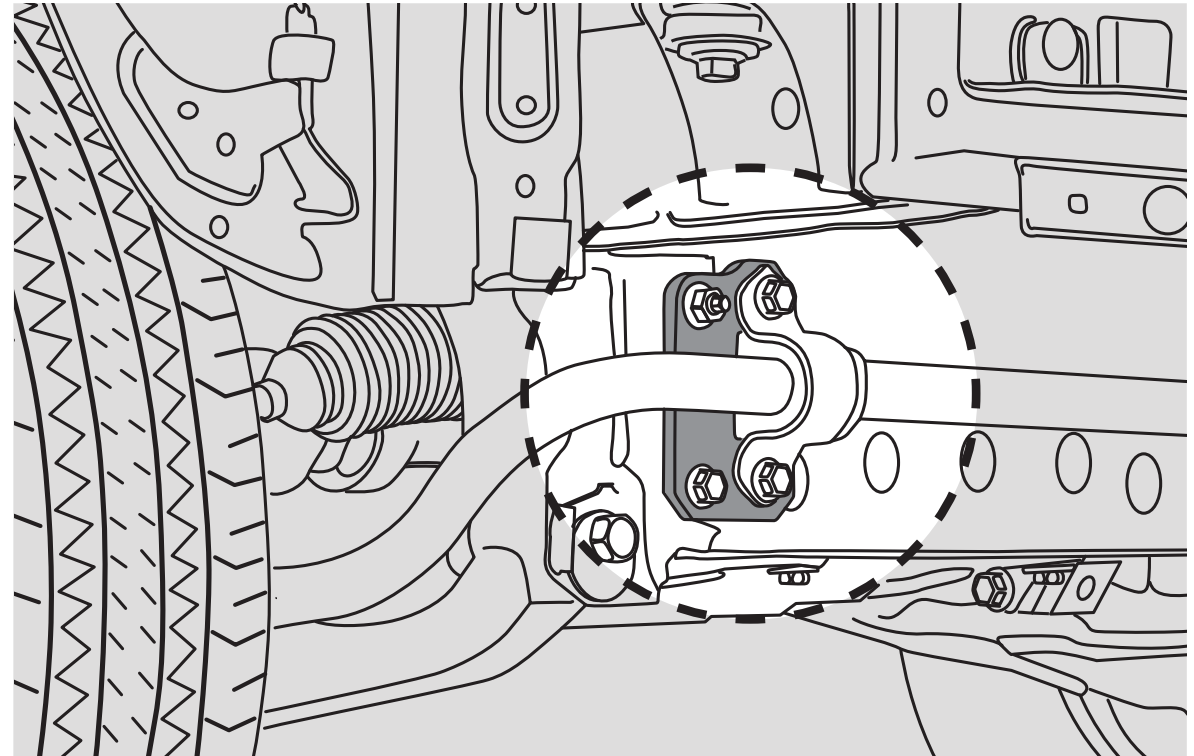

Thread:	M12 x 1.25
Tightening Torque:	145Nm