




**LDV T60**  
**Headlight Sensor Bracket Kit**

**PART NUMBER: 1207K**

**Headlight Sensor Bracket: (located on rear differential housing)**

1. Disconnect link rod and remove original bracket.
2. Install new bracket as shown using original hardware.
3. Select correct hole that ensures that the adjuster arm is parallel to rear differential housing.
4. Hole selection must be made at final ride height, on flat level ground.
5. Re-attach link rod to new bracket.

Fig 1.

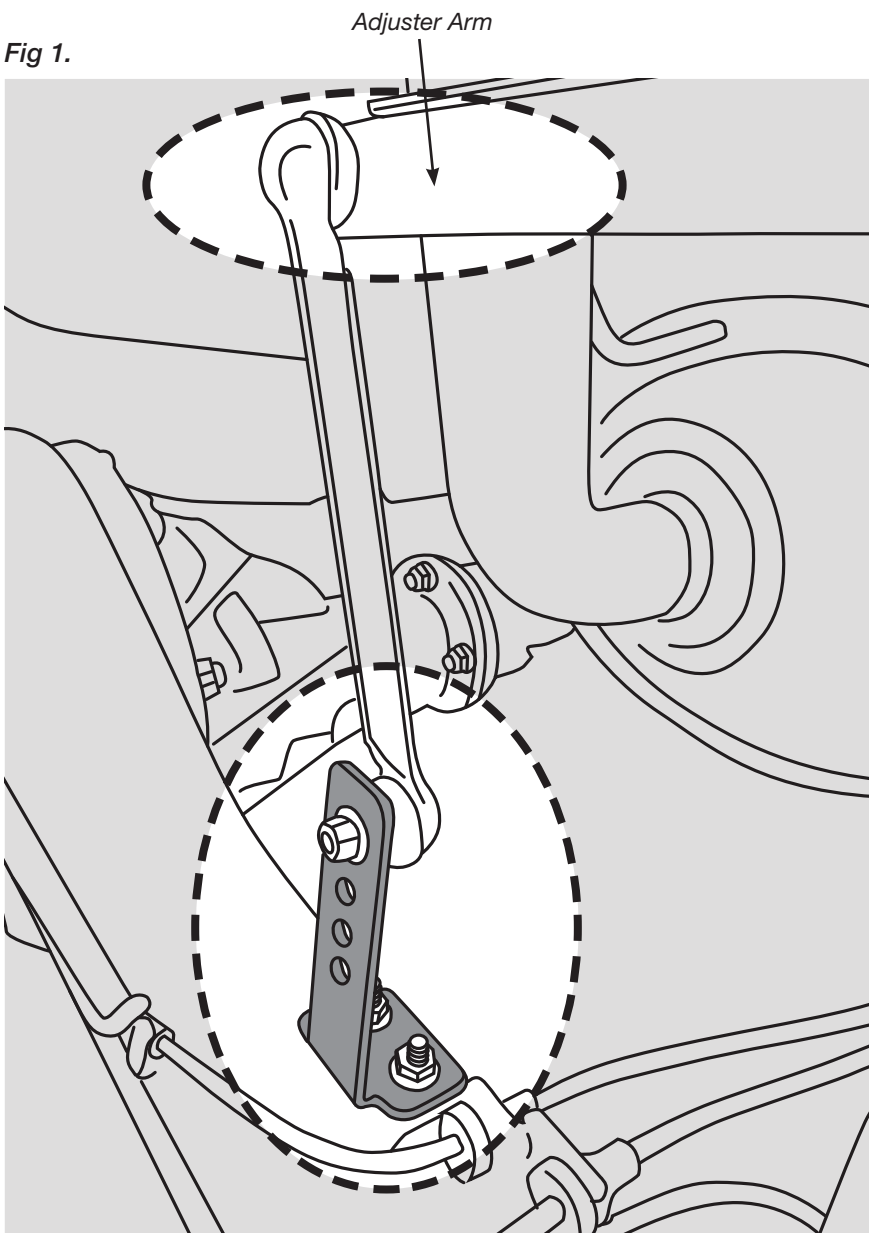

Thread:	M6 x 1.25
Tightening Torque:	15Nm