



IBTRAY057 BATTERY TRAY INSTRUCTION MANUAL


IBTRAY057 HOLDEN COLORADO 2012+ 2.8L DURAMAX TURBO DIESEL BATTERY TRAY DESIGNED TO GO WITH FULL RIVER DC50-12 BATTERY

1. Before installation check battery tray application is compatible with your vehicle.


2. Remove battery and plastic battery tray.



3. Unclip the ECU from its bracket.
Remove and disregard plastic bracket.

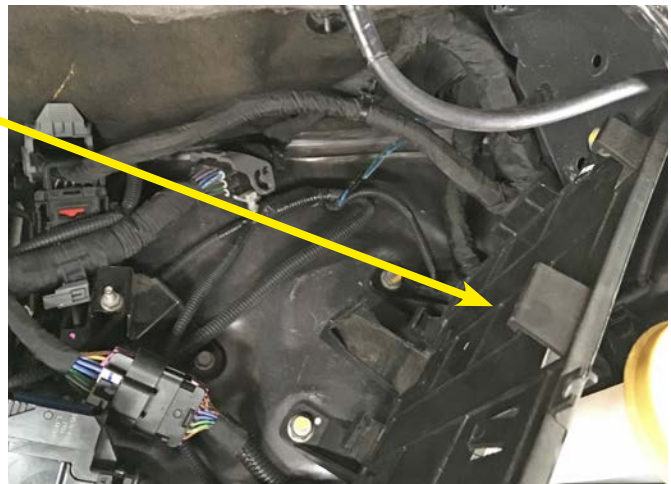


4. Remove and disregard brake line bracket.

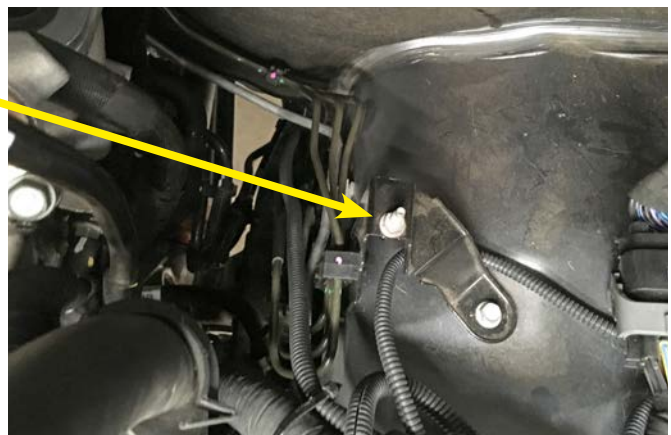

5. Place battery tray into position making sure that the grey plug is fed underneath it.

Insert the M8 countersunk bolt as shown.

Insert the 2 x M6 bolts and washers, and leave all bolts loose.

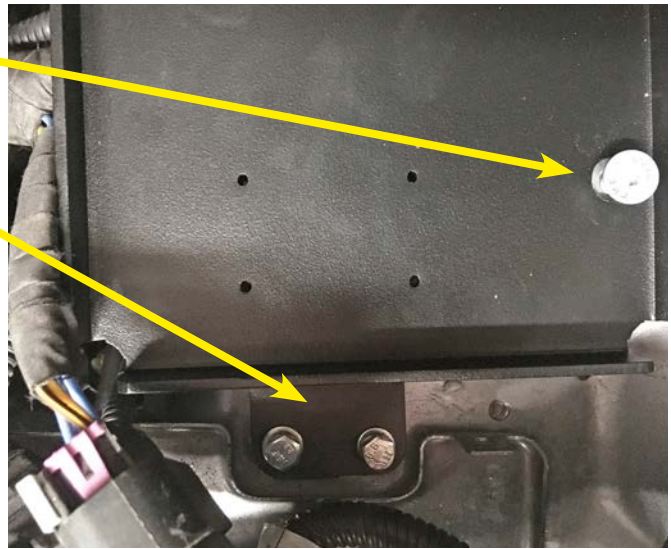

6. Insert M8 bolt and washers as shown.



7. Insert 2 x M6 bolts and washers through the support leg of the tray, into the wheel arch.



8. Mount the ECU to supplied bracket, plug the loom back in and mount to the inner guard.



9. Tighten all bolts.

10. Attach the earth cable to battery, then install auxiliary battery using J bolts to secure in place.

Install factory plastic battery tray, and crank battery.

